

Brickwall.O&M

URBAN RANGE



INNERSPACE

CHESHIRE

## Specification.

### Brickwall

Innerspace Cheshire **Brickwall** panels are cast from plaster of paris with hessian interlayer for stability. Panels are suitable for internal use.

**Brickwall** has one standard panel design. Different paint finishes available to view in our brochure.

#### Standard composition

<b>Panel</b>	Plaster of paris cast with hessian interlayer
<b>Dimension</b>	940mm(w)*990mm(h)
<b>Thickness</b>	10mm(d)
<b>Weight</b>	5kg per panel

**Environment** Innerspace Brick panels are plastic-free and use low VOC materials for both their manufacture and installation (all water based adhesive, plaster and paint)

**Transport** They are made in Britain so shipping is minimised

**Wastage** Modular panel size allows for minimal wastage

## Specification choices.

Brickwall

Standard


Brickwall.london

Brickwall.belfast

Brickwall.raw

Bricks+moss

[View more info in our brochure](#)

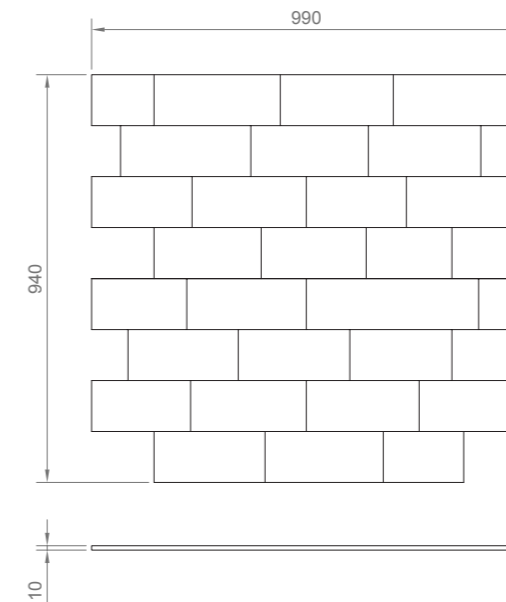

## Installation.

You can call to discuss with  
our technical team if you  
prefer 01270 625 043

### Guide

- Step 1** First trim the sheets so they interlock using a Sharp Stanley knife (see below) all the panels are moulded the same. Keep them the same way up or the interlock will not work.
- Step 2** You will need to create a straight edge for your starting panel. Use a ruler as a marker and draw a straight line down one side of the panel.
- Step 3** Using a Stanley knife or a fine tooth saw cut along your marked line to give you a straight edge.
- Step 4** Place your cut panel onto the wall at one end and mount using a strong form of adhesive, screws or staples.  
(Note: staples can only be used when applying faux brick to a stud or plastered wall)
- Step 5** You can now slot your second panel into the panel attached to the wall and repeat this process systematically until the wall is covered.
- Step 6** Once the surface is covered with the panels fill in the joints using an acrylic white mastic or plaster.
- Step 7** Then brush the joints using a wet thin paintbrush.
- Step 8** Allow the mastic/plaster to dry before moving onto step 9
- Step 9** For London & Belfast bricks only – Once the joints are dry, brush over the base / mortar colour provided using a thin brush. Once this paint has dried use a wet brush to apply the age / touch-up colour provided to the joints. Please note; this is a thin coat and really only a wash of colour. Whilst wet dab with a rag or a sponge until the joints are blended in with the surrounding panels.

## Maintenance.

### Options

#### Cleaning

The cleaning of the panels can be maintained by using a damp cloth.  
Raw - Stubborn stains can be painted over using a white standard paint.

#### Paint

Please use touch up paint provide. In the unlikely event of the panels getting damaged once installed they are easily touched up by applying plaster or a decorator's caulk once dried apply touch paint supplied.

We'd love to hear from you.

01270 625043

[office@innerspacecheshire.co.uk](mailto:office@innerspacecheshire.co.uk)

[www.innerspacecheshire.co.uk](http://www.innerspacecheshire.co.uk)



INNERSPACE

CHESHIRE